

# SIEMENS

## Gigaset C675



## User Manual

# Catalog

<b>Safty precaution.....</b>	<b>2</b>
Installing the base.....	3
Inserting the battery and charging .....	3
Handset at a glance.....	5
Base at a glance.....	6
Registering handsets.....	8
Deregistering handsets.....	8
Paging handsets.....	8
Setting date and time.....	8
<b>Basic Operation.....</b>	<b>9</b>
Activating/Deactivating keypad lock .....	9
Activating/Deactivating ringer tone.....	9
Back to the idle.....	9
Operating the menu.....	9
Correcting wrong input.....	9
<b>Making calls.....</b>	<b>10</b>
Making an external call.....	10
Mute.....	10
Ending a call.....	10
Accepting a call.....	10
Activating/deactivating Auto answer.....	10
Caller ID.....	10
<b>Using directory.....</b>	<b>11</b>
Phonebook.....	11
Last number redial list.....	11
Calls list.....	11
<b>IP dialing.....</b>	<b>12</b>
<b>Using several handsets.....</b>	<b>13</b>
Intercom.....	13
Conference call.....	13
<b>Answer Machine.....</b>	<b>14</b>
Operate answer machine on base.....	14
Operate answer machine by remote access.....	15
<b>Handset setting.....</b>	<b>16</b>
Ringer tone setting.....	16
Contrast setting.....	16
Activating/Deactivating the keypad beep.....	16
Language setting.....	16
Handset reset.....	16
<b>Base station setting.....</b>	<b>17</b>
Base tone setting.....	17
Base reset.....	17
Prefix PABX number.....	18
<b>Appendix.....</b>	<b>19</b>
<b>Menu tree .....</b>	<b>20</b>
<b>Standard character.....</b>	<b>22</b>

# Safety precaution

## Caution:

Read the safety precaution and the instruction before use.

Explain the contents to your children and the potential hazards associated with using the telephone.



Only use the main adapter supplied.



Fit only the recommended rechargeable batteries of the same type! Do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Insert rechargeable batteries as indicated by their polarity symbols, and use them according to these instructions (polarity symbols can be seen in the handset's battery compartments).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. operation rooms.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station in bathrooms or showers. The handset and base are not waterproof.



Switch off your phone when onboard aircraft. Ensure that it cannot be switched on and again accidentally.



Do not use your phone in environments with a potential explosion hazard, e.g. auto paint shops.



If you give your Gigaset to someone else, make sure you also give them the operating manual.

 


Dispose of the batteries and phone in accordance with environmental regulations.

## Preparing to use the phone

### Installing the base

Connect the Base to power cord (220V) and phone cord, place the cords in the cord recesses.

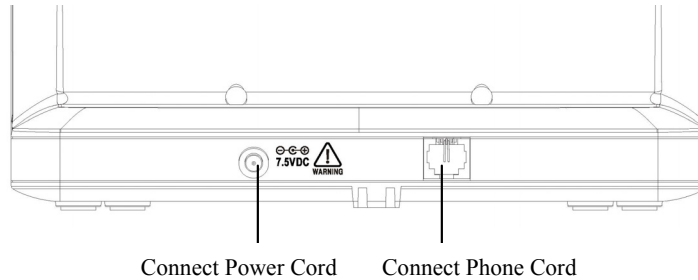

#### Notice:

Using the phone in a dry and indoor environment.

Try to place the phone on the center of your house.

Keep the phone away from hot things or other electric appliances, and no sunshine allowed.

Try to keep the phone away from other wireless equipment.

Keep the phone away from dust and corrosive liquid and air.

#### Remind with friendliness:

 
Keep the power adapter connects with Base all the time, or the Handset can't dialing out.

### Inserting the battery and charging

#### Notice:

 
It's recommended to use the batteries supplied by SIEMENS, i.e. never use the conventional (non-rechargeable) battery or other type of battery, or it could cause significant damage to health or property. For example: the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

Install the batteries as the polarity indicated in the case.

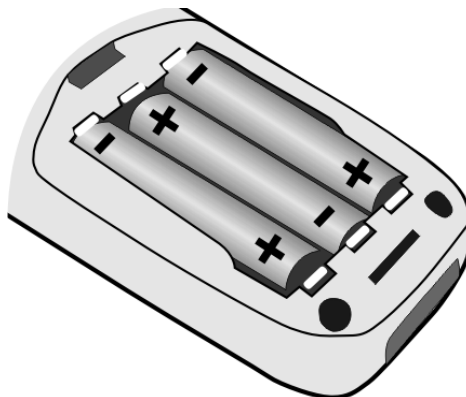

### **Closing the battery cover**

Put the cover on the phone as indicated on the picture below, push the cover upward until click sound is heard, means the cover is fixed properly.

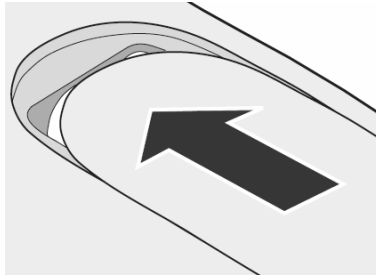


### **Open the cover**

Push downward to open the cover.

### **First time battery charging**

 
Put the handset on the charging cradle for charging. Please continue charging for more than 15 hours when first time using.

The battery icon  will flash on the top right of the display.

### **Remind with friendliness:**

- After the first time charging, the handset can be put on the charging cradle after talking/operation.
- The battery pack heats up during charging. This is normal and not dangerous.
- After a time, the battery capacity will decrease for technical reasons.

## Handset at a glance

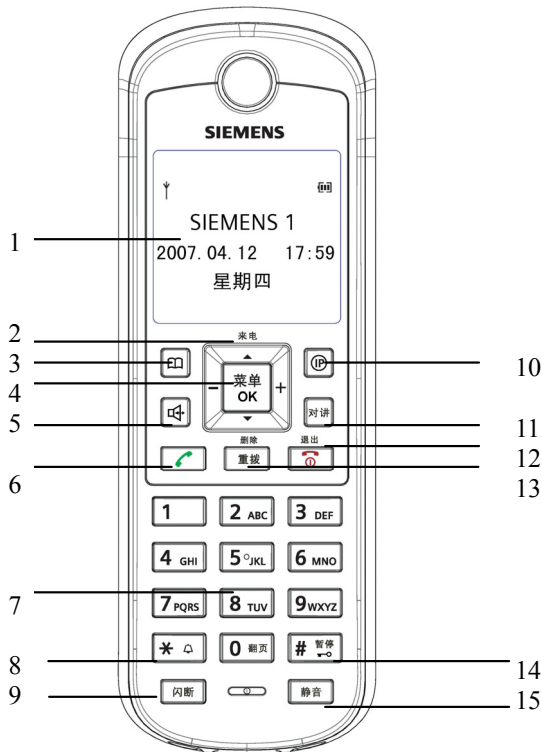

 
- 1, Display
- 2, Navi Key/Incoming Call
- 3, Phonebook
- 4, Menu/OK
- 5, Hands free
- 6, Talk
- 7, Digital keys
- 8, \*Key (Ringer off by long press)
- 9, Flash Key
- 10, IP Dialing
- 11, Intercom Key
- 12, End/Back (On/Off by long press)
- 13, Radial/Delete
- 14, #Key (Lock keypad by long press)
- 15, Mute Key

## Handset LCD



 
- 1, Radio signal
- 2, Talk
- 3, Incoming Call
- 4, Ringer off
- 5, Keypad lock
- 6, Hands free
- 7, Phonebook
- 8, Battery Icon
- 9, Handset Name
- 10, Date and Time
- 11, Weekday

# Base

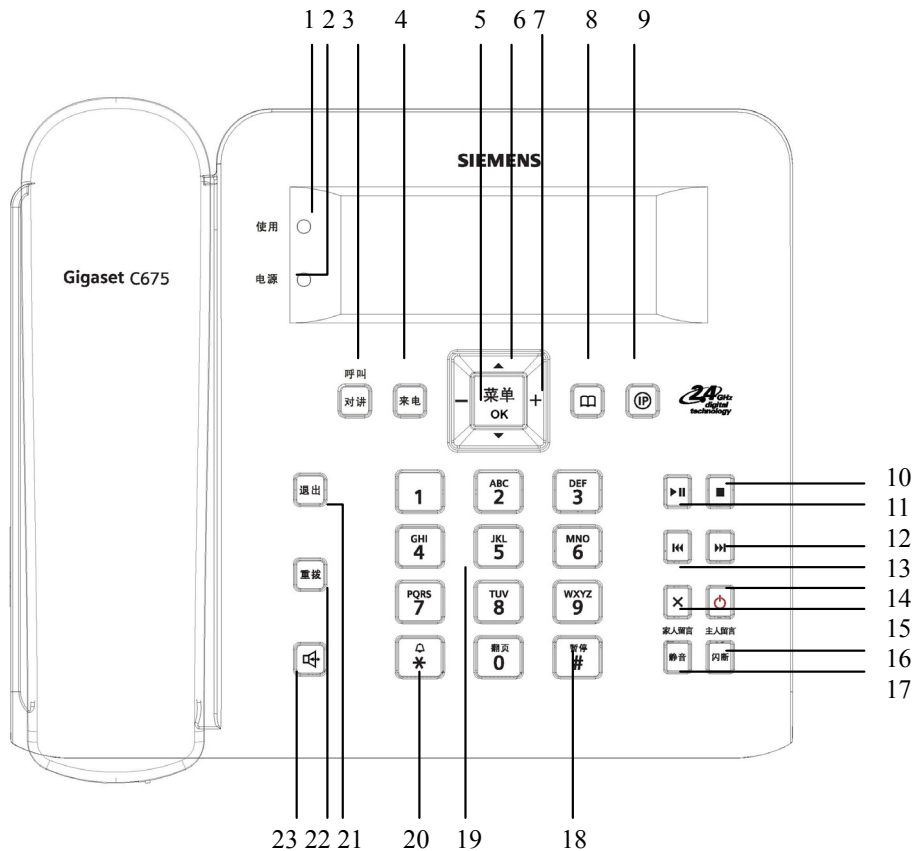

- |                                     |                                  |
|-------------------------------------|----------------------------------|
| 1, Using LED                        | 13, Last recording               |
| 2, Power LED                        | 14, Answer machine ON/OFF        |
| 3, Intercom/Paging                  | 15, Delete                       |
| 4, Incoming Call                    | 16, Flash/Owner recording        |
| 5, Menu/OK                          | 17, Mute/Family member recording |
| 6, Navi-key (Forward / Backward)    | 18, # Key                        |
| 7, Volume key (Increase / Decrease) | 19, Digital Key                  |
| 8, Phonebook                        | 20, * / Ringer off               |
| 9, IP Dialing                       | 21, Back                         |
| 10, Stop playing recording          | 22, Redial Key                   |
| 11, Play recording/Pause            | 23, Hands free                   |
| 12, Next recording                  |                                  |

## Base LCD

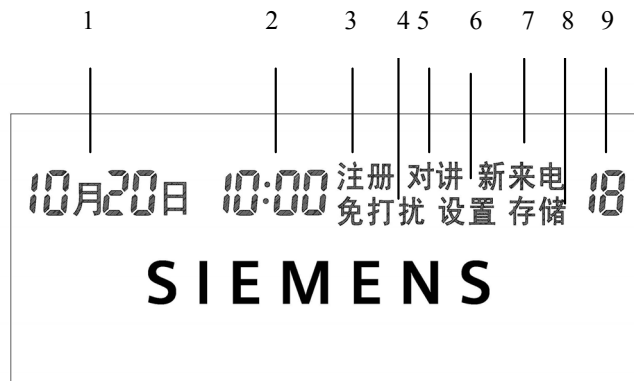

- 1, Date
- 2, Time
- 3, Registering
- 4, Ringer OFF
- 5, Intercom
- 6, Setting
- 7, Incoming Call
- 8, Storage
- 9, Counts of Incoming Call log



## Quick Index

## Register

## Registering Handset

Handset will auto register to base on **first using**.

If auto register failed, please do the operations as belowing.

Operations on Handset:

Press **菜单** → **▲ ▼** Select **ADVANCED SET.** **OK**

→ **▲ ▼** **REGISTRATION** **OK** → **REGISTER HANDSET?** **OK**

→ **PLEASE CONFIRM REGISTRATION** **OK** → **HOLD BASE PAGE WAIT FOR BEEP**

Operations on Base:

Hold Base Paging key until Beep → **Input Handset Name** **OK**

After registered successfully, the handset goes back to idle status. The and the handset number will display on the displayer.

You can register 4 handsets on 1 Base at most.

If fail to register, please repeat the operation above and try again.

## Deregister

## Deregistering handsets

Notice: Don't do this unless necessary!

Press **菜单** → **▲ ▼** Select **ADVANCED SET.** **OK**

→ **▲ ▼** **DEREGISTRATION** **OK** → **MOVE TO BASE CONFIRM DEREG** **OK**

→ **DEREGISTERED**

Handset will ask for registering after deregistered, otherwise you will not able to dial by handset.

## Paging

## Paging handsets

You can locate your handset using the base station.

Briefly press **对讲/呼叫** (paging) → **PAGING EXTENSION?**

→ Input the number of handset for paging, press \* Key for all handsets.

Handset paged will ring, even if the ringer tone was switched off.

**End paging:**

briefly press **对讲/呼叫** (paging) key on the base station or **☎** key on handset.

## Time Setting

## Setting Time and Date

Press **菜单** → **▲ ▼** Select **TIME SETTING** **OK** → Input Time/Date **OK**

e.g.(only for reference):

Setting Time/Date to 2008-7-17 20:38

Enter **TIME SETTING**, Ordinal inputing: 203820080717 **OK**

**Remind with friendliness:**

You do not need to set Time/Date again on base, for handset will synchronize this setting to base automatically.

## Quick Index

## keypad lock

Ringer  
OFF/ON

## End / Back


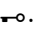
## Menu / OK

## Delete

## Scroll


## Basic Operations


## Activating/Deactivating keypad lock


Long press  (handset) to toggle lock / unlock. LCD will display .

It will unlock automatically while a call incoming. And Re-lock after talking.

## Ringer OFF/ON

Long press  to turn off ringer tone.

Handset LCD will display , Base LCD will display **免打扰**

Long press  once again to turn on ringer.

## Back to the idle


You can go back to the idle status by the following ways:

Press  key (Handset) back to the idle.

Press  key (Base) back to the idle.


## Operating the menu

Your telephone's functions are accessed from a menu with a number of levels-- Main menu and sub-menu.

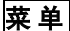To open the main menu, press  with the handset in idle status.

Scroll to the required function with  and press  to access the function.


## Correcting wrong inputs


Press  (Handset) to delete the latest inputs.

Press  (Base) to delete the latest inputs.

## Scrolling to display long number

If a telephone number is more than 12 digits in Phonebook or Redial list,

LCD will display 

You can use the  (Handset/Base) for scrolling to display next digits of the whole number.

## Quick Index



(Make a call)



(Mute On)





(End a call)

Auto answer



Caller ID

## Making calls

### Making an external calls

Enter the phone number then press  or .



Or:

Press  or  and then enter number.

#### Remind with friendliness:


You can also dial out by using the number stored in phonebook or redial list.

### Accepting a call


Press  or  to accept an incoming call.

If the handset is in the base and the **AUTO ANSWER** function is activated, the handset will take a call automatically when you lift it out of the cradle.


### Adjusting talking volume

You can press  to adjust talking volume


### Mute

Press  to deactivate the microphone during the talk with external line.


Screen display **MUTE ON**

Press  again to talk with external line again.

### Ending a call

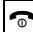Press  to end a talk.

## Activating/deactivating Auto answer

When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key .

Press  →  **PERSONAL SET.**  →  **AUTO ANSWER**   
→  Select **ON / OFF** 

## Caller ID

**Requirements: you have applied the CID service.**

When you get a call, the caller's phone number will be displayed on your handset.

The caller's name and number will be both displayed if it is stored in the phonebook

#### Remark:

The phone was made according to the national standards. However sometimes the CID function can't be displayed properly for the reason of some special using condition: e.g. connecting several phone on a single line or the PABX not a standard appliance. Please contact with your local telecom service supplier.

## Quick Index

## Phonebook

## Add entry

## Edit entry

## Delete entry

## Delete list

重拨  
Redial来电  
CID List

## Using the phonebook and lists

## Phonebook

You can save up to 50 phone numbers

Press to open the phonebook in idle. Press to look for entries

## Add entry (HS/BS)

Press → → Select **ADD ENTRY** → **ENTER NAME** → **ENTER NUMBER**

## Length of entry

Name: 15 letters

Phonebook number: 24 digits

## Dialling with the directory

Press → Select an entry → Press to dial.

## Edit entry (HS/BS)

Press → → Select **EDIT ENTRY** → **EDIT NAME** → **EDIT NUMBER**

## Delete entry (HS/BS)

Press → → Select **DELETE ENTRY** → Select an entry → **DELETE?** → **DELETED**

Please delete needless entries to keep up the phonebook storage

## Delete list (HS/BS)

Press → → Select **DELETE LIST** → **DELETE?** → **DELETE ALL?** → **DELETED**

## Redial list (HS/BS)

This list contains the 10 last dialled numbers.

Press → Select a number → Press to dial.

## CID List (HS/BS)

Press /来电 → Select a number → Press to dial.

## Precondition:

Had applied CID, and there are some incoming calls stored in the list.

Last 30 entries will be stored into the list.

Setting to display **ALL CALLS / MISSED CALL**

Press → **PERSONAL SET.** → **CALL LOGS** → Select **ALL CALLS / MISSED CALL**

If you set **missed call**, only missed call will be stored into the list.

## Quick Index

## IP number

## IP dialling

## Store IP number

Press **IP** (LCD display the former record) → Press **IP** again → **ENTER NAME** **OK**  
 → **ENTER NUMBER** **OK**.

The method that input **IP number** below is for your reference since it may different from various cards.

1, Input the IP access number. E.g. 17910

2, Insert "P" by double press key # if necessary (such as a voice prompt interrupt).  
 e.g. 17910P1P(means insert an pause P, select Chinese language, then insert pause again)

3, Input IP number and Password, end with #.

e.g. **17910P1P229021699398#5800#**

Press **OK** after all the input.

**Remind with friendliness:**

The IP dialling mentioned here refers to the function of the chargeable card, not the service that supplied by telecom

## IP dialling

## Using the IP dialling

There are three ways to dial with IP

1, Input a long distance number → press **IP**

2, Select a number in phonebook/redial list → press **IP**

3, Press  or  → press **IP** → input long distance number

## Quick Index


## Intercom

## Using several handsets



## Intercom

Handsets that registered on the same base can talk each other without calling fee.

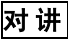
## Calling handsets

Press  → Input the number of Handset you want to call



(Handsets 1~4, Base 0, \* for all)

The other Handset/Base answering the call by pressing  or 


## Ending a call

Press  to end the call.

## Transfer an external call to other handset

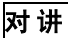During the talk with external call, press  → press the handset number you want to transfer. You can press  immediately or inform another handset before you end call.

## Internal consulting call

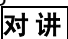During the talk with external call, you can call another handset for consulting.  
Press  → press the handset number you want to consult with. Intercom builds up after another handset answering that call.

It will auto come back to the external talk when the intercom ends.

## Conference call

## Conference call

You are conducting an external call. An internal caller can listen in on this call and take part in the conversation.



**Precondition:** The "CONFERENCE" function must be activated.


## Activate/Deactivate conference call

Press  →  CONFERENCE  →  Select **ON / OFF** 

## Start a conference call:

When you want to start a conference call during an external talk:

Press  or  to start a conference call by other handset.

The external call remains if one of the handset leave the conference call by pressing 

## Quick Index

## Answer Machine

## Owner Message

## Family Message

## Incoming Message

## Play Message

## Erase Message

## Answer Machine


Following operations are on Base

## Turning ON/OFF the Answer Machine

The answering machine must be turned on to work automatically


Press  to activate/deactivate the answering machine

## Record and play Owner Message

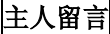
Hold  (闪断), recording will start when you see

**ANNOUNCEMENT RECORDING**, recording will stop when you loose 

**Note:** Owner message is no longer than 2 minutes

Hold  (闪断), and loose it immediately when you see

**ANNOUNCEMENT RECORDING** to restore default announcement.

Press  (闪断) to play owner message. Defaulting is "请在听到提示音后留言 (Leave your message after you hear a beep) "

## Family Message

Hold  (静音), recording will start when you hear a beep,

loose  (静音) to stop.



**Note:** This message is no longer than 3 minutes and you will see a new message after you do this.

## Incoming Message

When an external call comes in and enters the answering machine system, after the Owner Message, the machine will sound a beep when entering the message-recording mode. When the caller hangs up, the recording will be end up.

**Note:** This message is no longer than 3 minutes.


## Play/Pause/Stop

Press  to play the message, Pause by press again. Press  to stop.

## Forward/Backward

Press   to searching last/next message.

## Erase Message

Press  to erase the message now playing.

## Setting No. of Rings

Press  →  **NO. OF RINGS** 

→  Select (**3 RINGS**, **6 RINGS**, **TOLL SAVER**) 

## Remind with friendliness:

If no Owner Message recorded, system will use the default recording.

If the recording memory is full, system will auto turn off until you delete some storage.

**Quick Index****Remote  
Access****Remote Access**

This phone has remote access function. You can access it via other double-tone phones:

Put through to the answering machine,

After the Owner Message, enter remote access code (default is 000),

The menu will be audibly played as:

The audio instructions for remote control	
Press 2	Play the incoming messages
Press 2 again	Stop
Press 0	Erase
Press 1	Backward
Press 3	Forward
Press 4	Activate or deactivate
Press 7	Play the functional list

**Change Remote access code**

Long press  ➔ **SET REMOTE CODE** Input 3 digits new code 



## Quick Index

## Audio Setting

## Handset Setting

Handsets have default set, you can change them to your personal set.

## Audio Setting

## Volume

Press **菜单** → **▲ ▼** **AUDIO SETTING** **OK** → **▲ ▼** **RINGER VOLUME** **OK**  
 → **▲ ▼** Select (**HIGH**, **MEDIUM**, **LOW**, **OFF**, **ASCENDING**) **OK**

## Melody

Press **菜单** → **▲ ▼** **AUDIO SETTING** **OK** → **▲ ▼** **RINGER MELODY** **OK**  
 → **▲ ▼** Select (**MELODY 1** to **MELODY 10**) **OK**

## Contrast

## Contrast

Press **菜单** → **▲ ▼** **PERSONAL SET.** **OK** → **▲ ▼** **CONTRAST** **OK**  
 → **▲ ▼** Select (**LEVEL 1** to **LEVEL 3**) **OK**

## Key Beep

## Key Beep ON/OFF

Press **菜单** → **▲ ▼** **PERSONAL SET.** **OK** → **▲ ▼** **KEY BEEP** **OK**  
 → **▲ ▼** Select (**ON / OFF**) **OK**

## Language

## Language Setting

Press **菜单** → **▲ ▼** **PERSONAL SET.** **OK** → **▲ ▼** **LANGUAGE** **OK**  
 → **▲ ▼** Select (**ENGLISH / CHINESE**) **OK**

## Handset Reset

## Handset Reset

Press **菜单** → **▲ ▼** **ADVANCED SET.** **OK** → **▲ ▼** **HANDSET RESET** **OK**  
 → **▲ ▼** Select (**NO / YES**) **OK**

## Quick Index

Time  
Setting

## Base Setting

## Time Setting

There is no need to set time again if you have set by handset.

Press **菜单** → **▲ ▼** **TIME SETTING** **OK**

→ **TIME/DATE** Input Time/Date **OK** → **WEEKDAY** Input Weekday **OK**

## Base Tone

## Audio Setting

## Volume

Press **菜单** → **▲ ▼** **AUDIO SETTING** **OK** → **RINGER VOLUME** **OK**

→ **▲ ▼** Select (**HIGH**, **MEDIUM**, **LOW**, **OFF**) **OK**

## Melody

Press **菜单** → **▲ ▼** **AUDIO SETTING** **OK** → **RINGER MELODY** **OK**

→ **▲ ▼** Select (**MELODY 1** to **MELODY 10**) **OK**

## Key Beep

## Key Beep ON/OFF

Press **菜单** → **▲ ▼** **KEY BEEP** **OK**

→ **▲ ▼** Select **ON / OFF** **OK**

## Contrast

## Contrast

Press **菜单** → **▲ ▼** **CONTRAST** **OK**

→ **▲ ▼** Select **LEVEL1—LEVEL3** **OK**

Base  
Reset

## Base Reset

Press **菜单** → **▲ ▼** **BASE RESET** **OK**

→ **▲ ▼** Select **NO / YES** **OK**

## Quick Index

## TONE/PULSE

## FLASH TIME

## PABX/PREFIX

## NET WORK

## Base Setting under PABX

Only if your Base connected to PABX, the following settings shall effect

### Tone/Pulse

Press **菜单** → **▲ ▼** **TONE / PULSE** **OK**

→ **▲ ▼** Select (**TONE** , **PULSE**) **OK**

### Flash Time

Press **菜单** → **▲ ▼** **FLASH TIME** **OK**

→ **▲ ▼** Select (**100** , **300** , **600**) **OK**

### PABX PREFIX

Normally the prefix number, such as "0", is need to be added when you want to dial an external number if you phone is under PABX. This number can be automatically added if you set it in the Prefix.

Press **菜单** → **▲ ▼** **PABX PREFIX** **OK**

→ Input a PREFIX number (2 digits at most) **OK**

### Net Work Setting

Press **菜单** → **▲ ▼** **NET WORK** **OK**

→ **▲ ▼** Select (**PUBLIC NET** or **PRIVATE NET**) **OK**

### Dial an external number

**Precondition:** Set Network to **PRIVATE NET** and set a PABX PREFIX number.

Enter the phone number then press **↶** or **↷**

e. g.

Set PABX PREFIX number to 9

Enter 1234, Press **↶** or **↷**, number dialled out is **1234**

Enter 12345, Press **↶** or **↷**, number dialled out is **9P12345**

**Caution:**

PABX PREFIX will not implement if you press **↶** or **↷** and then enter number.

# Appendix

## Care

Wipe the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static.

## Contact with liquid

If the handset has come into contact with liquid:

Switch off the handset and remove the battery pack immediately.

Allow the liquid to drain from the handset.

Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).

Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

## General specifications

Standard	WDCT
Range	up to 300 m outdoors, up to 50 m in buildings
Power supply	220V~/50HZ
Temperature	0—45° C
Handset size	152x52x28mm
Handset weight	138g
Battery	750mAh
Calling time	6 hours
Standby time	140 hours

## Questions and answers

If you have any queries about the use of your phone, you can contact us any time at [www.siemens.com.cn/shc](http://www.siemens.com.cn/shc).

Or

Call hotline: 4006 706 007

## Menu Tree (Handset)

AUDIO SETTING	VOLUME	HIGH
		MEDIUM
		LOW
		OFF
		ASCENDING
	MELODY	MELODY 1
		...to
		MELODY 10
CONFERENCE	ON	
	OFF	
TIME SETTING		
PERSONAL SET.	CALL LOGS	ALL CALLS
		MISSED CALL
	AUTO ANSWER	ON
		OFF
	CONTRAST	LEVEL 1
		LEVEL 2
		LEVEL 3
	KEY BEEP	ON
		OFF
	LANGUAGE	CHINESE
		ENGLISH
ADVANCED SET.	REGISTRATION	
	DEREGISTRATION	
	HANDSET RESET	NO
		YES

## Menu Tree (Base)

TIME SETTING		
AUDIO SETTING	RINGER VOLUME	HIGH
		MEDIUM
		LOW
		OFF
	RINGER MELODY	MELODY 1
		to
		MELODY 10
KEY BEEP	ON	
	OFF	
CONTRAST	1/2/3	
FLASH TIME	100/300/600	
TONE/PULSE	TONE	
	PULSE	
NETWORK	PUBLIC NET.	
	PRIVATE NET.	
BASE RESET	YES	
	NO	
NO.OF RINGS	3 RINGS	
	6 RINGS	
	TOLL SAVER	
PABX PREFIX		

## Standard characters

You can input some characters (e.g. during phonebook edit) by continue pressing a key:

	1 x	2 x	3 x	4 x	5 x
<b>0</b>	0				
<b>1</b>	Space	<b>I</b>	<b>*</b>	<b>!</b>	<b>;</b>
<b>2</b>	A	B	C	<	2
<b>3</b>	D	E	F	>	3
<b>4</b>	G	H	I	/	4
<b>5</b>	J	K	L	`	5
<b>6</b>	M	N	□	<b>I</b>	6
<b>7</b>	P	Q	R	S	7
<b>8</b>	T	U	V	?	8
<b>9</b>	W	X	Y	Z	9
<b>*</b>	<b>*</b>				
<b>#</b>	<b>#</b>	P			